

1 Input: 2 or 3 Wire RTD
2 Outputs: 0-1 V to 0-10 V, ±1 V to ±10 V, 0-1 mA to 20 mA, 4-20 mA

[Quick Link: api-usa.com/1393](http://api-usa.com/1393)

- One RTD Input to Two Independent DC Outputs
- Zero and Span for Each Output
- Full 1200 V Isolation
- Input and Output LoopTracker® LEDs
- Output Test Button for Each Channel
- Built-In Loop Power Supply for Sink/Source Output



[Applications Link](http://api-usa.com/apps)
api-usa.com/apps

Free Factory I/O Setup!



Sink or Source mA Output for Each Channel

Output LoopTracker LED for Each Channel

Adjustable Output Test Function for Each Channel

Zero and Span for Each Channel

Input LoopTracker LED

Custom I/O Ranges
2 or 3 Wire RTD

Connect Sink or Source mA Input

Universal Power

Removable Plugs



See Wiring Diagrams on Next Page

Applications

- Split, Convert Output From One RTD Sensor for PLC Input, Control and/or Validation
- Interface an RTD with Multiple Panel Meters, PLCs, Recorders, Data Acq., DCS, & SCADA Systems

Temperature Input Range

Factory configured, please provide complete sensor specifications and temperature range.
 100°F (55°C) minimum span.

RTD input: Resistance at 0°C
 Curve (385, 3916, 392 etc.)
 Temperature range in °F or °C

RTD resistance: Typically 10 Ω to 2000 Ω, 2 or 3 wire

Excitation current: Typically 10 Ω: 10 mA, 100 Ω: 2 mA, 1000 Ω: 0.5 mA, 2000 Ω: 0.2 mA

Leadwire comp.: < ±0.05% of span per 1 Ω change in leadwire resistance, 3 wire sensor

LoopTracker

Variable brightness LEDs indicate I/O loop level and status
 One for input, one for each output

Channel 1 and Channel 2 DC Output Ranges

Factory configured, please specify for each output channel
 Voltage: 0-1 VDC to 0-10 VDC, 10 mA max up to 20 VDC with M19, M29, M39

Bipolar voltage: ±1 VDC to ±10 VDC

Current: 0-1 mA DC to 0-20 mA DC, 4-20 mA DC
 20 V compliance, 1000 Ω at 20 mA

Output Calibration

Multi-turn zero and span potentiometers for each output channel
 ±15% of span adjustment range typical

Output Loop Power Supplies

20 VDC nominal, regulated, 25 mA DC for each output channel
 May be selectively wired for sinking or sourcing mA output

Output Test/Override

Front momentary buttons or external contact closures for each channel to set output test levels.
 Each output test level potentiometer adjustable 0-100% of span

Output Ripple and Noise

Less than 10 mVRMS

Linearity

Better than ±0.1% of span

Ambient Temperature Range and Stability

-10°C to +60°C operating ambient
 Better than ±0.04% of span per °C stability

Response Time

70 milliseconds nominal

Isolation

Full 4-way, 1200 VRMS minimum

Installation Environment

IP 40, requires installation in panel or enclosure with adequate ventilation

For use in Pollution Degree 2 Environment

Mount vertically (as shown in picture) to a 35 mm DIN rail allowing minimum 1" (25 mm) above and below housing vents for air circulation

Power

85-265 VAC, 50/60 Hz or 60-300 VDC, 6 W maximum
 D versions: 9-30 VDC or 10-32 VAC 50/60 Hz, 6 W maximum

Dimensions and Connectors

1.78" W x 4.62" H x 4.81" D
 45 mm W x 117 mm H x 122 mm D
 Eight 4-terminal removable connectors, 14 AWG max wire size

Description

The APD 1393 IsoSplitter accepts an RTD temperature input and provides two optically isolated and linearized DC voltage or current outputs. The sensor type and temperature range and each independent output range can be specified as required. This provides an economical solution when one temperature signal must be sent to two different devices.

Typical applications include validation, datalogging, output device separation and redundancy (i.e. to prevent failure of the entire loop if one device fails), or a combination of these.

The temperature input is linearized, amplified, split, and then passed through an opto-coupler to the output stages. Full 4-way isolation (input, output 1, output 2, power) make this module useful for ground loop elimination, common mode signal rejection, and noise pickup reduction.

Output Sink/Source Versatility

Standard on the APD 1393 are 20 VDC loop excitation supplies for each output channel. These power supplies can be selectively wired for sinking or sourcing allowing use with any combination of powered or unpowered milliamp devices.

How to Order

Models are factory ranged. See I/O ranges above left. Please specify ranges and options on order

Sensor specifications, input temperature range

Channel 1 output range

Channel 2 output range

See options at right

| Model | Description | Power |
|------------|---|------------------------------------|
| APD 1393 | IsoSplitter 1 temperature input to 2 DC outputs | 85-265 VAC, 50/60 Hz or 60-300 VDC |
| APD 1393 D | | 9-30 VDC or 10-32 VAC |

LoopTracker

API exclusive features include three LoopTracker LEDs (green for input, red for each output) that vary in intensity with changes in the process input and output signals.

These provide a quick visual picture of your process loop at all times and can greatly aid in saving time during initial startup and troubleshooting.

Output Test

An API exclusive feature includes output test buttons for each channel to provide a fixed output (independent of the input) when held depressed. A test button is provide for each output channel. The output test greatly aids in saving time during initial startup and/or troubleshooting.

The test output level for each channel is potentiometer adjustable from 0 to 100% of the output span. Terminals are provided to operate the test functions remotely for each channel. This also allows use as a remote manual override to provide a temporary fixed output if desired.

Options and Accessories

Options—add to end of model number

- R1** Channel 1 output reversal (ie. 20-4 mA out)
- R2** Channel 2 I output reversal (ie. 20-4 mA out)
- R3** Channel 1 and channel 2 output reversal
- M19** Channel 1 high voltage output >10 V up to 20 V
- M29** Channel 2 high voltage output >10 V up to 20 V
- M39** Channel 1 and channel 2 high voltage output
- U** Conformal coating for moisture resistance

Accessory—order as separate line item

API BP4 Spare removable 4 terminal plug, black

Precautions

WARNING! All wiring must be performed by a qualified electrician or instrumentation engineer. See diagram for terminal designations and wiring examples. Consult factory for assistance.

WARNING! Avoid shock hazards! Turn signal input, output, and power off before connecting or disconnecting wiring, or removing or installing module.

Précautions

ATTENTION! Tout le câblage doit être effectué par un électricien ou ingénieur en instrumentation qualifié. Voir le diagramme pour désignations des bornes et des exemples de câblage. Consulter l'usine pour assistance.

ATTENTION! Éviter les risques de choc! Fermez le signal d'entrée, le signal de sortie et l'alimentation électrique avant de connecter ou de déconnecter le câblage, ou de retirer ou d'installer le module.

API maintains a constant effort to upgrade and improve its products. Specifications are subject to change without notice. See api-usa.com for latest product information. Consult factory for your specific requirements.

WARNING: This product can expose you to chemicals including nickel, which are known to the State of California to cause cancer or birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov

Electrical Connections

See wiring diagrams. Observe polarity. If the output does not function, check wiring and polarity.

* Do not make any connections to unused terminals or use them as wiring junctions for external devices. This may cause permanent damage to the module!

Each product is factory configured to your exact input and output ranges as indicated on the serial number label. The input range is factory pre-configured (at 24°C ±1°C).

Check label for module operating voltage to make sure it matches available power.

The power supplies are fuse protected and the unit may be returned to API for fuse replacement.

Outputs

For milliamp output ranges, determine if your devices provide power to the current loop or if the loop must be powered by the APD module. Typical voltage may be 9-24 VDC at your device's terminals if it provides power to the loop. See note about terminating an unused mA output channel.

| Output Device for Channel 1 | - Terminal | + Terminal |
|--|------------|------------|
| Measuring or recording device accepts a voltage input. | 3 (-) | 4 (+) |
| Measuring/recording device accepts a mA (current) input and the input is unpowered or passive. APD module provides the loop power. | 3 (-) | 4 (+20 V) |
| Measuring or recording device accepts a mA (current) input and provides power to the current loop. | 2 (-) | 3 (+) |
| Output Device for Channel 2 | - Terminal | + Terminal |
| Measuring or recording device accepts a voltage input. | 7 (-) | 8 (+) |
| Measuring/recording device accepts a mA (current) input and the input is unpowered or passive. APD module provides the loop power. | 7 (-) | 8 (+20 V) |
| Measuring or recording device accepts a mA (current) input and provides power to the current loop. | 6 (-) | 7 (+) |

RTD Input

The sensor type and temperature range are factory configured. See the model/serial number label for sensor type and range. The temperature sensor input is connected as shown in the wiring diagrams.

| Temperature Input | Term. | Term. | Term. |
|-------------------|----------------|-------------------|----------------|
| Two wire RTD | 17 Signal - | Jumper 18 & 19 | 19 Signal + |
| Three wire RTD | 17 Signal - | 18 Exc. | 19 Signal + |

Module Power Terminals

Check model/serial number label for module operating voltage to make sure it matches available power.

When using DC power, either polarity is acceptable, but for consistency, wire positive (+) to terminal 25 and negative (-) to terminal 28.

Mounting to a DIN Rail

Install module vertically on a 35 mm DIN rail in a protective enclosure away from heat sources. Do not block air flow. Allow 1" (25 mm) above and below housing vents for air circulation.

1. Tilt front of module downward and position the lower spring clips against the bottom edge of DIN rail.

2. Push front of module upward until upper mount snaps into place.

Removal

Avoid shock hazards! Turn signal input, output, and power off.

1. Push up on bottom back of module.

2. Tilt front of module downward to release upper mount from top edge of DIN rail.

3. The module can now be removed from the DIN rail.

Calibration

Front-mounted Zero and Span potentiometers for each channel can be used to compensate for load and lead variations.

1. Apply power to the module and allow a minimum 20 minute warm up time.

2. Using an accurate calibration source, provide an input to the module equal to the minimum input required for the application.

3. Using an accurate measurement device for the output, adjust the Zero potentiometer for the exact minimum output desired. The Zero control should only be adjusted when the input signal is at its minimum. This will produce the corresponding minimum output signal. For example: 4 mA for a 4-20 mA output or -10 V for a ±10V output.

4. Set the input at maximum, and then adjust the Span pot for the exact maximum output desired. The Span control should only be adjusted when the input signal is at its maximum. This will produce the corresponding maximum output signal. Example: for 4-20 mA output, the Span control will provide adjustment for the 20 mA or high end of the signal.

5. Repeat adjustments for both output channels for maximum accuracy.

Output Test Function

When the Test button is depressed it will drive the output with a known good signal that can be used as a diagnostic aid during initial start-up or troubleshooting. When released, the output will return to normal.

Each Test Cal. potentiometer is factory set to approximately 50% output. It can be adjusted to set the test output from 0 to 100% of the output span. Press and hold the Test button and adjust the Test Cal. potentiometer for the desired output level.

They may optionally be externally wired for remote test operation or a manual override. See wiring diagrams.

Operation



The APD 1393 IsoSplitter® accepts an RTD input and provides two linearized and optically isolated DC voltage or current outputs.

The green LoopTracker® input LED provides a visual indication that a signal is being sensed by the input circuitry of the module. It also indicates the input signal strength by changing in intensity as the process changes from minimum to maximum.

If the LED fails to illuminate, or fails to change in intensity as the process changes, check the module power or signal input wiring.


The two red LoopTracker output LEDs provide a visual indication that the output signals are functioning. They become brighter as the input and each corresponding output change from minimum to maximum.

For a current output the red LED will only light if the output loop current path is complete. For either current or voltage outputs, failure to illuminate or a failure to change in intensity as the process changes may indicate a problem with the module power or signal output wiring. Note that it may be difficult to see the LEDs under bright lighting conditions.

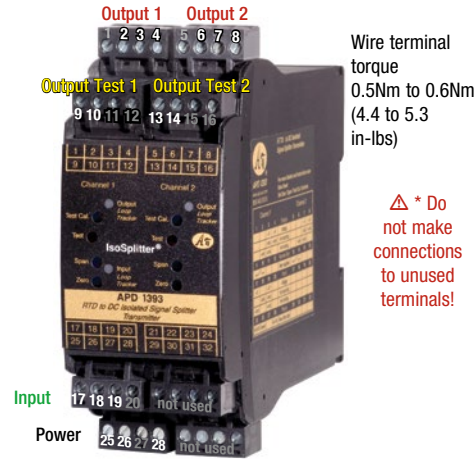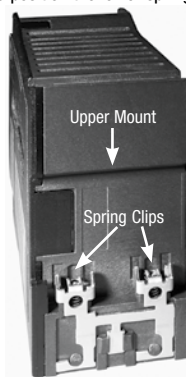





Wire terminal torque
0.5Nm to 0.6Nm
(4.4 to 5.3 in-lbs)

⚠ * Do not make connections to unused terminals!

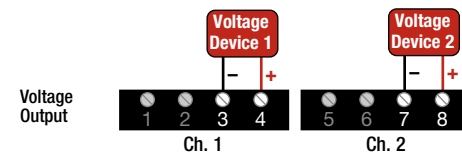


mA output: determine if receiving device has a passive or powered input. The module can be wired for a sinking or sourcing mA output.

* To avoid damage to the module, do not leave any unused mA outputs disconnected. Use a 1000 Ohm 1/2 Watt resistor across unused mA terminals.

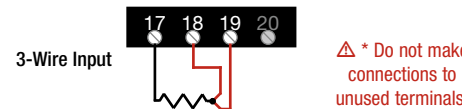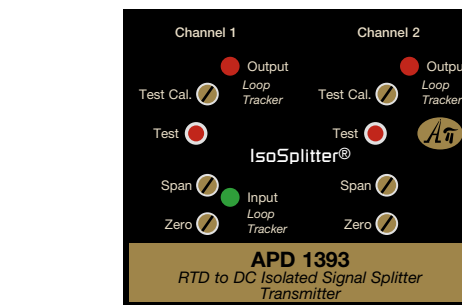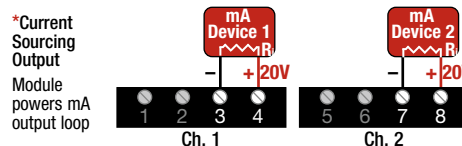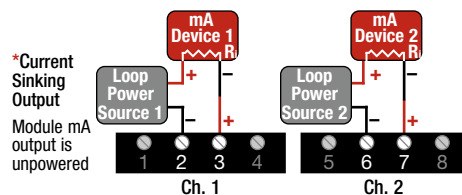

⚠ * Do not make connections to unused terminals!

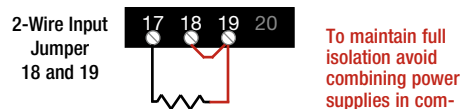

To maintain full isolation avoid combining power supplies in common with outputs or unit power.

